

doesn't work? There is a steering pole at the top of the switch,

which is in the locked position. Put it in the position where it needs to be turned. When the switch button is pressed, the machine will start to turn. 2. Why does the electric drill stop running before the screw is tightened

Why do you press the switch and the machine

screw is tightened? At this time, please adjust the torsion adjustment ring between the fuselage and the chuck. The torsion corresponding to position 1 is the smallest and that

Environmental protection

response to environmental protection, damaged machines, accessrioes and packaging aterials must be classified in detail to facilitate and recycle. order to facilitate classification and recycling, all plastic parts are marked with material.

Component list

Serial No.	Name	Number	Serial No.	Name
1	Shell	1	22	Shaft sleeve
2	Lampshade	1	23	Front Gear Box
3	Pin	1	24	Steel ball
4	Back Gear Box	1	25	Torque spring shim
5	Gasket of back gear box	1	26	Torque adjustment shim
6	first layer anular gear	1	27	Torque spring
7	First layer planetary gear	3	28	Torque thread
8	First layer planet carrier	1	29	Drill Chuck
9	Variable speed gear ring	1	30	Cross recessed countersunk head tapping screw
10	Throw-over gasket	1	31	Output shaft
11	Interstage gasket	1	32	Output axis clamp
12	Second layer planetary gear	3	33	Bearing 6800
13	Single speed fluted disc	1	34	Torsion cup
14	anular gear	1	35	Cross recessed pan head tapping screws
15	Third layer planetary gear	1	36	Shift steel wire
16	Axis lock planet carrier	3	37	Motor
17	Mechanical variable Speed Button	1	38	Steering lever
18	Lock shaft pin	1	39	Battery pack
19	Shaft locator	3		
20	Spacer	1		
21	Shaft ring	1		

*This list just reference

8

Brushless Lithium Power Drill CO-0011

7. Spindle self-locking function The spindle self-locking function enables the machine to operate as a manual tool. When the battery pack power is exhausted, the machine can be manually rotated to tighten or loosen the screw. At this time, the chuck is fixed.

RUCK IS TARED. 8. Use LED lights Press the machine switch to turn on the working lamp, loosen the

Press the machine switch to turn on the working lamp, loosen the switch to turn off the working lamp. LED lights can greatly improve the regularity of use in dark or closed

Brushless Lithium Power Drill CQ-0011

General safety warning for

power tools

Warning!Read all safety warnings, instructions, drawings and regulations that come with power tools.Failure to follow the instructions listed below can result in electric shock, fire and/or serious injury. Save all warnings and instructions for review. In all of the warnings listed below, the term "power tool" refers to either mains driven (wired) power tools or battery driven (wireless) power tools.

electric snocks. 4. Do not abuse the flexible wire. Never use the 3. Before making any adjustments, replacing Do not abuse the lexible wire. Never use the flexible wire to carry, pull the power tool or pull out its plug.Keep flexible wire away from heat sources, oil, sharp edges or moving parts.Damaged or wound cords increase the risk of electric shock.
 Use extension cords suitable for outdoor use

C. Personal safety 1. Be alert, pay attention to what you are doing and stay awake when operating power tools. Do not operate power tools when you are tired or have reactions to drugs, alcohol or treatment.Momentary inattention in handling power tools can result in

conditions to reduce personal injury. 3. Prevent accidental start.Ensure that the switch is in the off position before connecting the power supply and battery pack, and before picking up or carrying power tools.Placing a finger on a switch to move tools or when the switch is on can be dangerous.

dangerous. 4. Remove all adjusting keys or wrenches before the power tool is connected. Wrenches or keys left on the rotating parts of power tools can cause personal interv

injury. 5. Don't overextend your hands. Always pay attention or battery driven (wireless) power tools.
A. Workplace safety
1. Keep the working area clean and bright.Cluttered and dark Spaces can cause accidents.
Do not operate power tools in an explosive environment, such as flammable liquid, gas or dust.Sparks from power tools can ignite dust or gas.
3. Keep away from children and bystanders with a device supervise light of the dust or gast.
5. Letertical safety
1. The electric plug must match the socket. The plug unst not be modified in any way.Grounding power tools should not use any conversion plug.Ummddifed plugs and matching sockets will reduce the risk of sockets.
Desting the reduction of power tools the reductions of power tool

plugs and matching sockets will reduce the risk of electric shocks.
2. Avoid human contact with grounding surfaces, such as pipes, heat sinks, and refrigerators. There is an increased risk of electric shock if your body touches the ground surface.
3. Do not expose power tools to rain or moisture.
3. Do not expose power tools increases the risk of electric shocks.

Before making any adjustments, replacing accessories, or storing power tools, remove the plug from the power supply and remove the battery. This protective safety measure reduces the risk of accidentally starting power tools.
 Store unused power tools out of the reach of bildece and do not allow them to be concrited by

Use extension cords suitable for outdoor use when using power tools outdoors. Wires suitable for outdoor use will reduce the risk of electric shocks.
 If operation of power tools in wet conditions cannot be avoided, use a power supply with residual current device (RCD) protection.
 Be alert, pay attention to what you are doing and stay awake when operating power tools. Do not
 Store unused power tools out of the reach of people who are unsamily with power tools and do people who are unfamiliar with power tools and do angerous in the hands of untrained users.
 Maintain power tools and accessories. Check for moving parts that are in place or stuck, parts that are damaged and other conditions that affect the obsolut be repaired before use. Many accidents are call by poort waintained on were tools

stay awake when operating power tools. Do not operate power tools when you are tired or have reactions to drugs, alcohol or treatment.Momentary inattention in handling power tools can result in serious injury.
2. Use personal protective devices Wear goggles and protective devices at all times.Devices such as dust masks, non-slip safety shoes, helmets and hearing protection can be used under appropriate
by bound be repaired before use.Many accidents are caused by poorly maintained power tools. Ckeep cutting tools sharp and clean. A well-maintained tool with a sharp cutting edge does not and is easy to control.
7. Select power tools, accossories, tool heads, etc. account operating conditions and operations to be performed. Using power tools for operations that are not appropriate for their purpose can lead to dangerous situations.

Keep handle and holding surface dry, clean and free from grease. In the event of an accident, a slippery handle does not guarantee secure grip and control of the tool.
 E. Battery tools and precautions

 Use only the charger battery specified by the manufacturer. Chargers that work in one battery pack may be a fire hazard when used in other battery packs.

njury and fire.

may corrode or burn. 5. Do not use damaged or modified batteries or tools.Damaged or modified battery packs can have unpredictable results, resulting in fire, explosion, or

temperature.Exposure of the battery pack to fire or high temperatures above 130°C may cause an

Rechargeable drill safety warning 1. If the tool is pr

1. If the tool is provided with an auxiliary handle, use the auxiliary handle. Uncontrolled use of the tool

may cause personal injury. 2. If the working attachment may come into contact with hidden wires during operation, hold the working insulated gripping surface. When the work accessory comes into contact with the "live" wire, the exposed comes into contact with the "live" wire, the exposed metal part of the power tool may also become "live" and give the operator an electric shock. 3. Make sure your feet are standing still.When using tools from a height, make sure no one is below you. 4. Hold tools tightly. 5. Keep your hands away from the rotating parts.

o. Neep your nands away from the rotating parts.
6. Do not operate the tool without being looked after. You can use this tool only by hand.
7. Do not touch the drill or work immediately after operation, these parts may be very hot and burn your skin.

Some materials contain toxic chemicals. Be careful not to breathe in dust and avoid skin contact Follow material supplier's safety tips.

7

Keep these manuals properly

▲ warning: Do not follow the product safety rules for convenience or because you are familiar enough with the product (due to repeated use).improper use or failure to follow the safety rules in this manual can result in serious personal injury.

Marks

To minimize damage, users should read the instructions carefully before using

Warning label

Indoor use only

Do not place in rain or water

Do not expose to fire

Please wear a dust mask

The body of the product (excluding





Brushless Lithium Power Drill CQ-0011

packs. 2. Use only power tools equipped with special battery packs.Use of other battery packs may cause

injury and fire.
3. When the battery pack is not in use, keep it away from other metal objects such as paper clips, coins, keys, nails, screws, or other small metal objects to prevent one end of the battery pack from connecting to the other. A short circuit at the end of the battery pack may cause combustion or fire.
4. Under abusive conditions, liquid may spill out of the battery pack. Avoid contact. If accidental contact with liquid, rinse with water. Seek medical attention if fluid touches the eye. Liquid spilled from the battery may corrode or burn.
5. Do not use damaged or modified batteries or

injury. 6. Do not expose the battery pack to fire or high

explosion. F. maintenance 1. Use the same spare parts to repair power tools by professional maintenance personnel. This will ensure the safety of the power tools being repaired. 2. Never repair a damaged battery pack. The battery pack can only be repaired by the manufacturer or its outboride carries provider.


Please wear goggles

Please wear protective ear muffs

battery) does not contain toxic or harmful substances or elements, and it is a green product. It can be recycled after waste, and should not be discarded at will.

harmful substances or elements, its environmental protection life is 10 years, it can be recycled after discarded, should not be discarded at will.

3

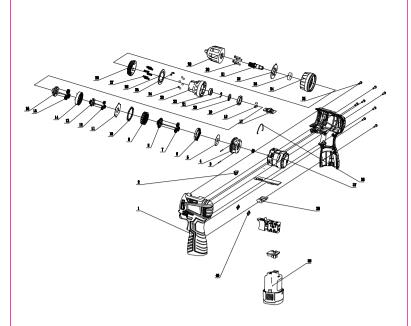




Company : Hunan Jiangyun Intelligent Technology Co.,Ltd Website : www.brototools.com

Add : Software Centre Building, Lugu Street, High-Tech Development Zone, Yuelu District, Changsha, Hunan, China

6

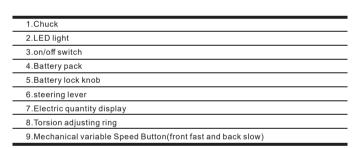

*Some of the accessories mentioned in the drawings or words are not included in the scope of supply **Buckle can be installed(this model does not include buckle)


Parameter

Voltage	16V	
No-load speed	0-450/0-1500r/min	
Torsion adjustment gear	20+1	
Max chuck capacity		10mm
Max drilling capacity	Steel	10mm
Max unning capacity	Wood	30mm
Battery		2000mAH

We suggest that you choose your accessories from the shop where you buy power tools. Please use the high quality accesssories of well-know brands and choose the accessories that are suitable for your work.Please refer to the attached package description before use, you will get more methods and help to use.



Hunan Jiangyun Intelligent Technology Co., Ltd

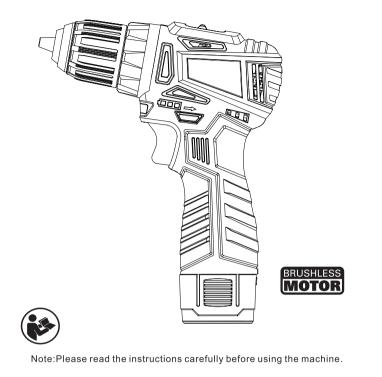

Brushless Lithium Power Drill CQ-0011

Instruction

Product Usage Description

Read all warnings and instructions. Failure to follow the warnings and Instructions may result in electric shock, fire or other serious injury.

Operational guidelines

Note: Before using the machine, please read the instructions

ose: This tool is used to screw or drill holes in wood, metal

Charge

The charger and the machine need to be used together. It is strictly prohibited to use other chargers. In high temperature environment or after long-term use, the machine may become hot. At this time, please do not charge immediately, and recharge after the battery is cooled. Otherwise, the service life of the battery will be shortened or the battery can not be recharged due

to overheating. When the machine is charged for the first time or not used for a long time, a ther 2-3 times of charging and discharging, the battery efficiency can reach 100%.

The battery pack can be inserted into the charger in only one direction. Turn the battery pack until it can be inserted into the harger. When the red light of the charger is on, the charging

begins. When a full battery pack is inserted into the charger, the smart charger will detect the voltage of the battery pack. When the unlock voltage is not reached, the charger will not charge the battery pack and the red light will not turn green.


To remove the battery pack, press the lock in front of the battery pack and pull it out.

To insert the battery pack, just push it into the machine, do not use too much force

Operation

1. Start/close (see figure B) Press the switch start the machine loosen the machine to ston Press the switch is start the machine, loosen the machine to stop running. The switch has braking function. When the switch is loosened, the chuck stops turning immediately. The force applied on the switch can change the speed, and the range of change is from 0 to the maximum speed. Small force, low speed, easy to control, do not let the machine stop running because it bears too much load.

Warning: Do not operate at low speed for a long time, or here will be overheating reaction inside the machine.

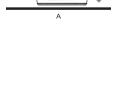



4